


TYPE 5 CABINET BASE

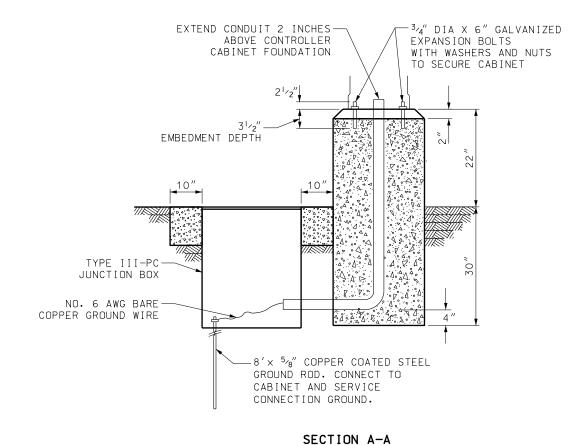

TYPE 6 CABINET BASE

## NOTES:

- 1. ATTACH THE GROUNDED SIDE OF THE SERVICE PEDESTAL POWER SUPPLY TO GROUND ROD IN THE TYPE III JUNCTION BOX.
- 2. MAINTAIN 1" MINIMUM SPACING BETWEEN CONDUITS IN CABINET BASE. CAP OR PLUG CONDUITS AT BOTH ENDS UNTIL USED.
- 3. IDENTIFY AND LABEL ALL FIELD TERMINALS.
- 4. GROUND CABINET BY CONNECTING GROUND WIRE TO GROUND ROD IN TYPE III JUNCTION BOX.
- 5. PLACE ALL CONDUITS IN THE SAME TRENCH WHERE POSSIBLE.
- 6. SEAL ALL CONDUITS INSIDE JUNCTION BOX AND CABINET AFTER WIRING IS COMPLETE.

REVISIONS	02/23/06 L.M. ENTIRE DRAWING REVISED.								NO. DATE APPR.
	1 02/								NO. DA
1		NSTRUCTION			•	FEB.23,2006	DATE	FEB.23,2006	_
	CIAT DENETINENT OF TRANSPORTERION	STANDARD CRAWINGS FOR ROAD AND BRIDGE CONSTRUCTION	SAL LAKABELLONIAN		RECOMMENDED FOR APPROVAL	- popul 1/11 conserve	CHAIRMAN STANDAFOS COMMITTE	しくとう	DEPUTY DIRECTOR
TRAFFIC SIGNAL CONTROLLER BASE DETAILS									
STD DWG SL 1Ø									